

 
# JVC



## BOOM BOX

**SIRIUS**   
SATELLITE RADIO

# KS-SB200

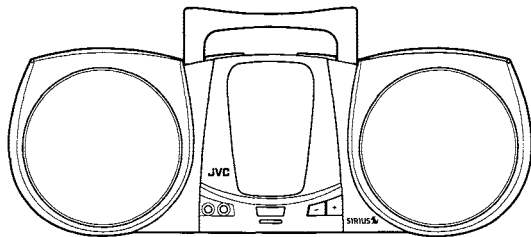

## INSTRUCTIONS

### For Customer Use:


Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_



Serial No. \_\_\_\_\_

 LVT1307-001B

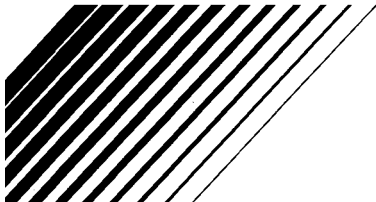[J]



## Warnings, Cautions and Others

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

---

### **CAUTION—POWER button!**

Disconnect the mains plug and remove all the batteries to shut the power off completely (all lamps and indications go off). The POWER button in any position does not disconnect the mains line.

- When the unit is turned off, the power-on lamp goes off.
- When the unit is turned on, the power-on lamp lights green.
- For battery use:  
When the batteries are almost exhausted, the power-on lamp lights red (see page 8).

### **CAUTION**

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### **CAUTION**

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

We would like to thank you for purchasing Boom Box.

This product is designed to enjoy JVC PnP easily either inside or outside of your house.

Before operating this unit, read this manual carefully and thoroughly to obtain the best possible performance from your unit, and retain this manual for future reference.

## **IMPORTANT CAUTIONS**

### **Where to place the unit**

- Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C or 41°F and 95°F).
- Leave sufficient distance between the unit and a TV.
- Do not use the unit in a place subject to vibrations.

### **Power cord**

- Do not handle the power cord with wet hands!
- Some power is always consumed as long as the power cord is connected to the wall outlet.
- When unplugging the unit from the wall outlet, always pull the plug, not the power cord.

### **When carrying the unit**

- Disconnect all the cords from the unit.

### **Malfunctions, etc.**

- There are no user serviceable parts inside. In case of system failure, unplug the AC power cord, remove all the batteries, and consult your dealer.
- Do not insert any metallic object into the unit.
- The unit is not waterproof or dust proof.

## **Table of contents**

Preparations .....	5
Operations .....	8
Troubleshooting .....	10
Specifications .....	11

## **Supplied Accessories**

- AC power cord
- AC adaptor
- Antenna

If any of these items are missing, contact your dealer immediately.



### **CAUTION:**

Only use the power cord and AC adaptor provided for this unit to avoid malfunction or damage to the unit.

## Preparations

Do not connect the AC power cord until all other connections have been made.

 
### Connecting the Antenna

Connect the supplied antenna by referring to the illustration.

- Refer also to the manual supplied to the JVC PnP (KT-SR2000) for details.


**For indoor use**, place the antenna closer to the window.

**For outdoor use**, place the antenna at a location from obstructions.

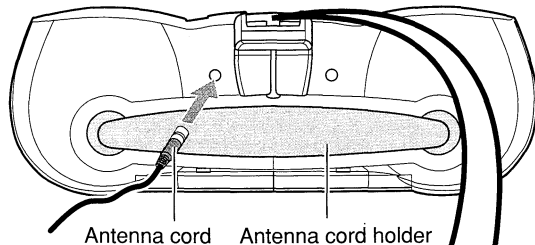

**To store the antenna**, attach the four holes on the bottom of the antenna into the four projections on top of the unit. Then, slide backward to engage it fully.

 - You can wind the antenna cord around the antenna cord holder on the rear of the unit.

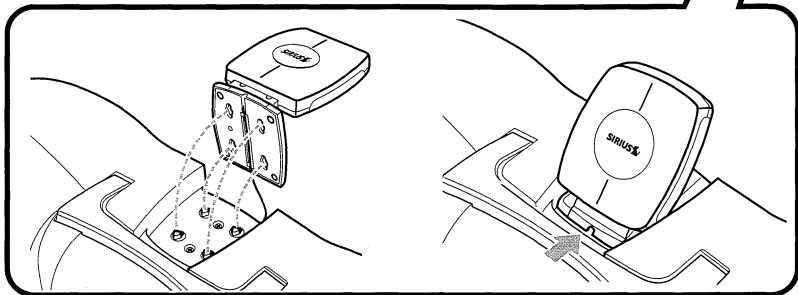

## Preparations

Do not connect the AC power cord until all other connections have been made.

 
 
### Mounting JVC PnP

**IMPORTANT:** Make sure to turn the power off of both the unit and JVC PnP when attaching/removing JVC PnP.


- 1** Press **PUSH** on the top of the unit to open the dock holder.
- 2** Attach JVC PnP by sliding it down to the dock.
  - Press in JVC PnP firmly to the dock.
- 3** Close the dock holder.

**Note:** The internal cooling fan ventilates automatically. Do not close the ventilation slits or the proper ventilation is obstructed.

To remove JVC PnP, press **PUSH** on the top of the unit, then pull out JVC PnP by holding the sides of JVC PnP.

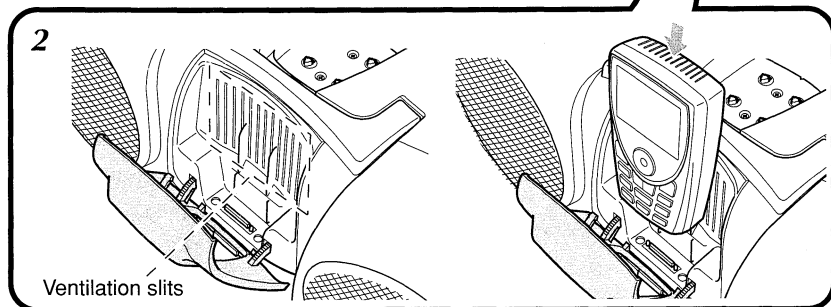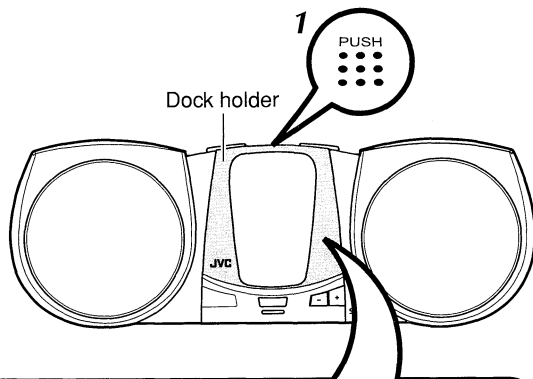

## Putting the Batteries into the Unit

- 1 Push and pull up tabs to open the battery compartment cover on the bottom of the unit to the direction of .
- 2 Insert 8 batteries by matching the polarity as marked on the compartment.
  - Insert batteries in order of number as shown in the illustration.
- 3 Close the battery compartment cover.

 
- When the power is supplied from AC power with AC adaptor connected to the unit, the batteries are not consumed.



### CAUTION:

To avoid battery leakage or explosion:


- Remove the batteries when the unit is not in use for an extended period of time.
- When you need to replace the batteries, replace all 8 batteries at the same time.
- Do not use different types of batteries together.

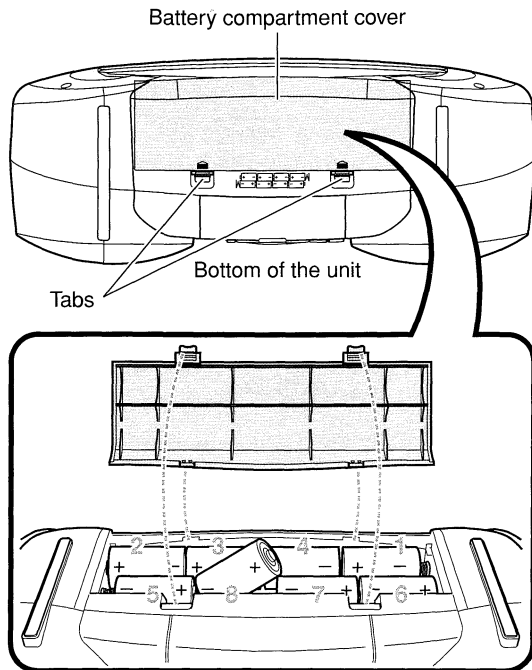

**Preparations** Do not connect the AC power cord until all other connections have been made.

## Connecting the AC power cord

 Connect the unit to the outlet as described in the illustration below.

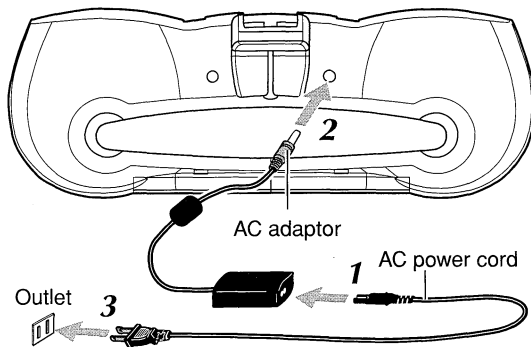

### CAUTIONS:

- Only use the power cord and AC adaptor provided for this unit to avoid malfunction or damage to the unit.
- Be sure to unplug the power cord from the outlet when going out or when the unit is not in use for an extended period of time.

## Operations

### Turning on the Power

**1** Press **POWER** on the unit.

**2** Turn on **JVC PnP**.

- The sound does not come out when JVC PnP is turned off.

 
The power-on lamp lights green.

- When the power-on lamp lights red, the batteries are almost exhausted. This condition may cause degraded performance. Replace the batteries.

**To turn off the power**, press **POWER** on the unit.

The power-on lamp goes off.

- JVC PnP also turns off.

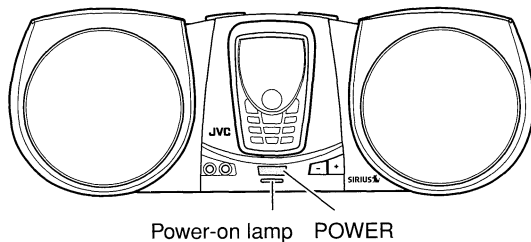



## Adjusting the Volume

Press **VOLUME +** to increase the volume or press **VOLUME -** to decrease it.

- When you press and hold **VOLUME +** or **-**, the volume changes rapidly.

**Even if you turn down the volume to the minimum level, the volume cannot be turned off completely.**

**For private listening:**

**Connect a pair of headphones to the PHONES jack on the unit.**

No sound comes out of the speakers.

- Be sure to turn down the volume before connecting or putting on headphones.



### CAUTION:

DO NOT start playing any source without first setting the volume to minimum, as a sudden blast of sound can damage your hearing, speakers and/or headphones.



PHONES jack  
(3.5 mm stereo mini jack)

VOLUME + and -

 
## Listening to auxiliary equipment

**Connect auxiliary equipment to AUX jack on the unit.**

- The unit changes the listening source to auxiliary equipment automatically.

**Note:** Turn JVC PnP's power off while listening to the auxiliary equipment to save the battery power.

**To listen to JVC PnP, unplug the cord from the AUX jack.**

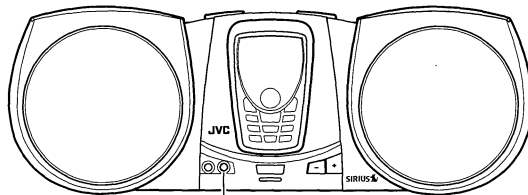

AUX jack  
(3.5 mm stereo mini jack)

## ***Troubleshooting***

If you are having a problem with your unit, check this list for a possible solution before calling for service.

If you cannot solve the problem, or the unit has been physically damaged, call a qualified person, such as your dealer for service.

Symptom	Possible Cause	Action
The unit does not turn on.	<ul style="list-style-type: none"><li>• JVC PnP is not turned on.</li><li>• Batteries are not installed or not installed properly.</li><li>• AC adaptor and/or AC power cord is not connected properly.</li></ul>	<ul style="list-style-type: none"><li>• Turn on JVC PnP.</li><li>• Install batteries by matching the polarity.</li><li>• Check the connection of both AC adaptor and AC power cord to the unit.</li></ul>
The unit does not operate using batteries.	Battery operation is not active if the AC adaptor is connected to the unit.	Disconnect the AC adaptor from the unit.
Operation stops intermittently.	The batteries are exhausted.	Replace the batteries.
"Antenna Not Detected" appears on the tuner's display.	<ul style="list-style-type: none"><li>• Antenna is not connected to the unit.</li><li>• JVC PnP is not attached correctly to the dock.</li></ul>	<ul style="list-style-type: none"><li>• Connect the antenna.</li><li>• Make sure JVC PnP is attached correctly to the dock.</li></ul>
"Acquiring Signal" appears on the tuner's display.	There are obstacles over or around the antenna.	Change the position and direction of the antenna.
No sound is heard.	Headphones are connected to the unit.	Disconnect headphones.

## *Specifications*

### **Amplifier**

Output Power:

**4 W per channel, min. RMS, driven into 8  $\Omega$  at 1 kHz  
with no more than 10% total harmonic distortion.**

Input Impedance (AUX): 8 k $\Omega$

Input Level (Satellite Radio/AUX):

2.0 V (Maximum)

Output Impedance (PHONES):

32  $\Omega$

Output Level (Variable) (PHONES):

20 mV (Maximum)

Connector Type (PHONES, AUX):

3.5 mm Stereo Jack

Signal-to-noise ratio:

86 dB (Maximum)

### **Speakers**

Speaker Type:

Bass-reflex type 12.6 cm

(5 inches)

Tweeter 28 mm (1 - 1/8 inches)

Speaker Impedance:

8  $\Omega$

Frequency Response:

100 Hz to 20 kHz

### **General**

Power Requirements:

DC 12V

("R20/D (13F)" batteries (8))

External DC 12V

(TESA2-1202500 AC adaptor)

Dimensions:

497 mm x 183 mm x 196 mm

(W x D x H)

(19 - 5/8 inches x 7 - 1/4 inches x

7 - 3/4 inches)

Mass:

3.3 kg (7.3 lbs) (without batteries)

4.1 kg (9.1 lbs) (with batteries)

Design and specifications are subject to change without notice.

**Having TROUBLE with operation?**  
**USA ONLY**  
**Call 1-800-252-5722**  
**<http://www.jvc.com>**  
**We can help you!**

**JVC**

 


© 2004 Victor Company of Japan, Limited

© 2004 SIRIUS Satellite Radio Inc. "SIRIUS" and the SIRIUS dog logo  
are registered trademarks of SIRIUS Satellite Radio Inc.

1004MNMMDWZAC

## Sirius Boombox/Plug N Play Locking Instructions

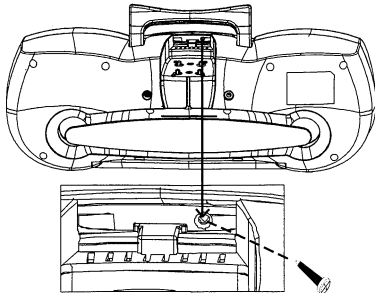

### FOR STORE DISPLAY USE

1. Install the Plug N Play into the Sirius Boombox following the instructions provided in the Owner's Manual.
2. Install the pan head Philips screw supplied in the kit contents as shown to lock the Plug N Play to the Sirius Boombox.  
This procedure is generally used by retailers for product display.

# Important Products Safety Instruction

Electrical energy can perform many useful functions. But improper use can result in potential electrical shock or fire hazards. This product has been engineered and manufactured to assure your personal safety. In order not to defeat the built-in safeguards, observe the following basic rules for its installation, use and servicing.

## **ATTENTION:**

Follow and obey all warnings and instructions marked on your product and its operating instructions. For your safety, please read all the safety and operating instructions before you operate this product and keep this brochure and the operating instructions packaged with your product for future reference.

# INSTALLATION

## 1. Grounding or Polarization

**(A)** Your product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature.

If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**(B)** Your product may be equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature.

If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

## 2. Power Sources

Operate your product only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. If your product is intended to operate from battery power, or other sources, refer to the operating instructions.

## 3. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

## 4. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

## **5. Ventilation**

Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered.

- Do not block the openings by placing the product on a bed, sofa, rug or other similar surface.
- Do not place the product in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

## **6. Wall or Ceiling Mounting**

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

# **ANTENNA INSTALLATION INSTRUCTIONS**

## **1. Outdoor Antenna Grounding**

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

## **2. Lightning**

 
For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.



### 3. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

#### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE, ANSI/NFPA 70

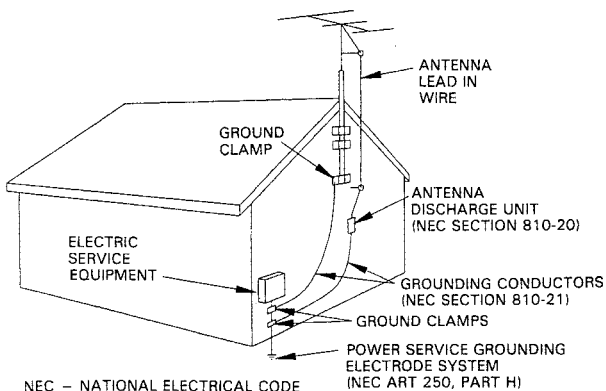

## USE

### 1. Accessories

To avoid personal injury:

- Do not place this product on an unstable cart, stand, tripod, bracket, or table. It may fall, causing serious injury to a child or adult, and serious damage to the product.
- Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product.
- Use a mounting accessory recommended by the manufacturer and follow the manufacturer's instructions for any mounting of the product.
- Do not try to roll a cart with small casters across thresholds or deep-pile carpets.

## **2. Product and Cart Combination**

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



## **3. Water and Moisture**

Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool and the like.

## **4. Object and Liquid Entry**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

## **5. Attachments**

Do not use attachments not recommended by the manufacturer of this product as they may cause hazards.

## **6. Cleaning**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

## **7. Heat**

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

# SERVICING

## 1. Servicing

If your product is not operating correctly or exhibits a marked change in performance and you are unable to restore normal operation by following the detailed procedure in its operating instructions, do not attempt to service it yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 2. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or damaged in any way.
- f. When the product exhibits a distinct change in performance—this indicates a need for service.

## 3. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

## 4. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating conditions.

**Thank you for purchasing**

**JVC®**

Instructions

Fold so opening is at the top.

Tape in middle or on front.

Please do not send products or other  
correspondence to this address.

307C



PLACE  
FIRST-CLASS  
STAMP  
HERE

**JVC®**

**PO BOX 3434**

**PEORIA IL 61612-3434**



## **PRODUCT REGISTRATION CARD/QUESTIONNAIRE**

**US CUSTOMERS ONLY**

Registering your product will allow us to contact you in the unlikely event a product safety notification is required.

This form is for Product Registration purposes only. Failure to return this form does not diminish your rights during the warranty period.

**THANK YOU FOR PURCHASING THIS JVC PRODUCT**

**REGISTER ONLINE AT: [WWW.JVC.COM](http://WWW.JVC.COM)**

First Name: \_\_\_\_\_

Last Name: \_\_\_\_\_

Address: \_\_\_\_\_

Apt # \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_

Zip: \_\_\_\_\_

Phone: \_\_\_\_\_

Email Address: \_\_\_\_\_

**Thank you! We appreciate your responses to this questionnaire.**  
**The information you choose to share with us will be used by JVC to offer you**  
**product information and other communications that may interest you.**  
**If you prefer not to be contacted about these special offers, please check here. { }**

Date of Purchase \_\_\_\_\_

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Purchase Price \_\_\_\_\_

Dealer \_\_\_\_\_

**1) Did you:**

- Purchase this product your self?
- Receive this product as a gift?

**5) Your Gender:**

- Male
- Female

**2) Is this Product:**

- The first product of this type you have ever owned?
- A replacement for a similar JVC product?
- A replacement for a similar product made by another company?
- An addition to a similar product you are still using?

**6) Your Marital Status**

- Married
- Single

**3) What factors most influenced your decision to purchase this product?**

- JVC brand reputation
- Previous experience with JVC products
- Price
- Specific product features
- Style/appearance
- Salesperson's recommendation
- Friend/relative's recommendation
- Warranty coverage
- Other

**7) What is your approximate annual household income level?**

- Under \$25,000
- \$25,000 – \$49,000
- \$50,000 – \$74,000
- \$75,000 – \$99,000
- \$100,000 and over

**Comments:**

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**4) How did you learn about this product?**

- Magazine Advertisement
- Newspaper Advertisement
- TV/Radio Announcement
- Product Brochure
- Direct Mail
- Mail Order Catalog
- Friend/Relative Recommendations
- Salesperson/Store Recommendation
- Internet
- Dealer Event
- Other

**JVC Thanks you for completing this questionnaire.**  
**Your responses will help us reach you with offers that may interest you.**  
**If you prefer not to receive these offers please check here { }**



## WARRANTY REPAIR / REPLACEMENT FORM

PLEASE COMPLETE THE FOLLOWING;

PLEASE NOTE : P.O. BOXES ARE NOT ACCEPTABLE

NAME: \_\_\_\_\_

STREET ADDRESS: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE \_\_\_\_\_ ZIPCODE \_\_\_\_\_

DAY TIME PHONE NUMBER: \_\_\_\_\_

REASON FOR RETURN \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

***Please do not return your product to the retailer. Instead, please box the product carefully, preferably in the original carton, and ship, insured to the JVC repair/replacement facility nearest you.***

A COPY OF YOUR BILL OF SALE, A COMPLETED WARRANTY REPAIR/REPLACEMENT FORM AND ALL OF THE ORIGINAL ACCESSORIES WHICH CAME WITH YOUR UNIT MUST ACCOMPANY THE PRODUCT TO BE ELIGIBLE FOR REPAIR/REPLACEMENT UNDER WARRANTY.

To obtain the address of the location nearest you, please call **(800) 252-5722** or visit our website <http://www.jvc.com>.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department at **(800) 252-5722**.



## LIMITED WARRANTY PORTABLE AUDIO EXCHANGE-90

JVC COMPANY OF AMERICA warrants this portable audio product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of the original retail purchase for the period shown below. ("The Warranty Period")

<b>LABOR 90 DAYS</b>	<b>PARTS 90DAYS</b>
----------------------	---------------------

**THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.**

### WHAT WE WILL DO:

If this product is found to be defective within the warranty period, JVC will, at its option, either repair or replace the defective part(s) or replace the product with a new or refurbished functionally equivalent product. Within 90 days from date of retail sale, repair or replacement will be at no charge to the customer.

### WHAT YOU MUST DO FOR WARRANTY SERVICE:

***Please do not return your product to the retailer.*** Instead, please box the product carefully, preferably in the original carton, and ship, insured to the JVC repair/replacement facility nearest you.

To obtain the address of the location nearest you, please call (800) 252-5722 or visit our website at <http://www.jvc.com>

A COPY OF YOUR BILL OF SALE, A COMPLETED WARRANTY REPAIR/REPLACEMENT FORM AND ALL OF THE ORIGINAL ACCESSORIES WHICH CAME WITH YOUR UNIT MUST ACCOMPANY THE PRODUCT TO BE ELIGIBLE FOR REPAIR/REPLACEMENT UNDER WARRANTY.

If you have any questions concerning your JVC Product, please contact our Customer Care Center at (800) 252-5722.

### WHAT IS EXCLUDED:

The warranty does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed.
2. Initial installation, installation and removal, from "built in" entertainment centers, and other mounting systems.
3. Operational adjustments covered in the Owner's Manual, normal maintenance, including head cleaning.
4. Damage that occurs in shipment, due to act of God, and cosmetic damage.
5. Signal reception problems and failures due to line power surge.
6. Products used for commercial purposes (including but not limited to rental).
7. Accessories.
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase).

There are no express warranties except as listed above.

### AFTER THE WARRANTY:

Please contact JVC's Customer Care Center at (800) 252-5722 to obtain the cost of out of warranty repair or replacement.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**JVC COMPANY OF AMERICA**  
DIVISION OF JVC AMERICAS CORP.

**1700 Valley Road**  
Wayne, New Jersey 07470

<http://www.jvc.com>

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use:

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet.  
Retain this information for future reference.

Model No.: \_\_\_\_\_ Serial No.: \_\_\_\_\_

Purchase Date : \_\_\_\_\_ Name Of Dealer : \_\_\_\_\_